

POWAPACS®

Power Your Adventure



Ultralite parameters

Operation Guide

Light mode

Press the mode switch on the top of the headlamp to turn on the light. You can choose from 5 modes.

Motion mode

Press the motion mode switch to activate motion / induction mode in any colour option. You can turn the headlamp on/off by waving your hand in front of headlamp motion sensor, The button will glow BLUE when motion is active. Press the switch again to deactivate motion mode.

Mode/colour options

Press the mode switch to select light mode, press again within 3 seconds to cycle through light options.

1. Main beam
2. Flood beam
3. Main and flood beam
4. Red
5. Green

If the light is left on a selection for more than 5 seconds the ultralite will remember this option and store for memory. on/off

Low battery and charging

The Ultralite will dim when the battery is needing charged or it will stop cycling through modes. To charge plug in the provided charge cable to any USB compatible device and the red indicator light next to charge port will illuminate, once fully charged the light will turn green.

Precautions for use

1. Fully charge Ultralite before first use.
2. When carrying or transporting, ensure that the button switch is protected from foreign objects, to avoid false triggering of the lamp.
3. Do not disassemble the lamps at will to prevent product damage.
4. Do not shine directly in eyes to avoid eye irritation caused by strong light stimulation.